


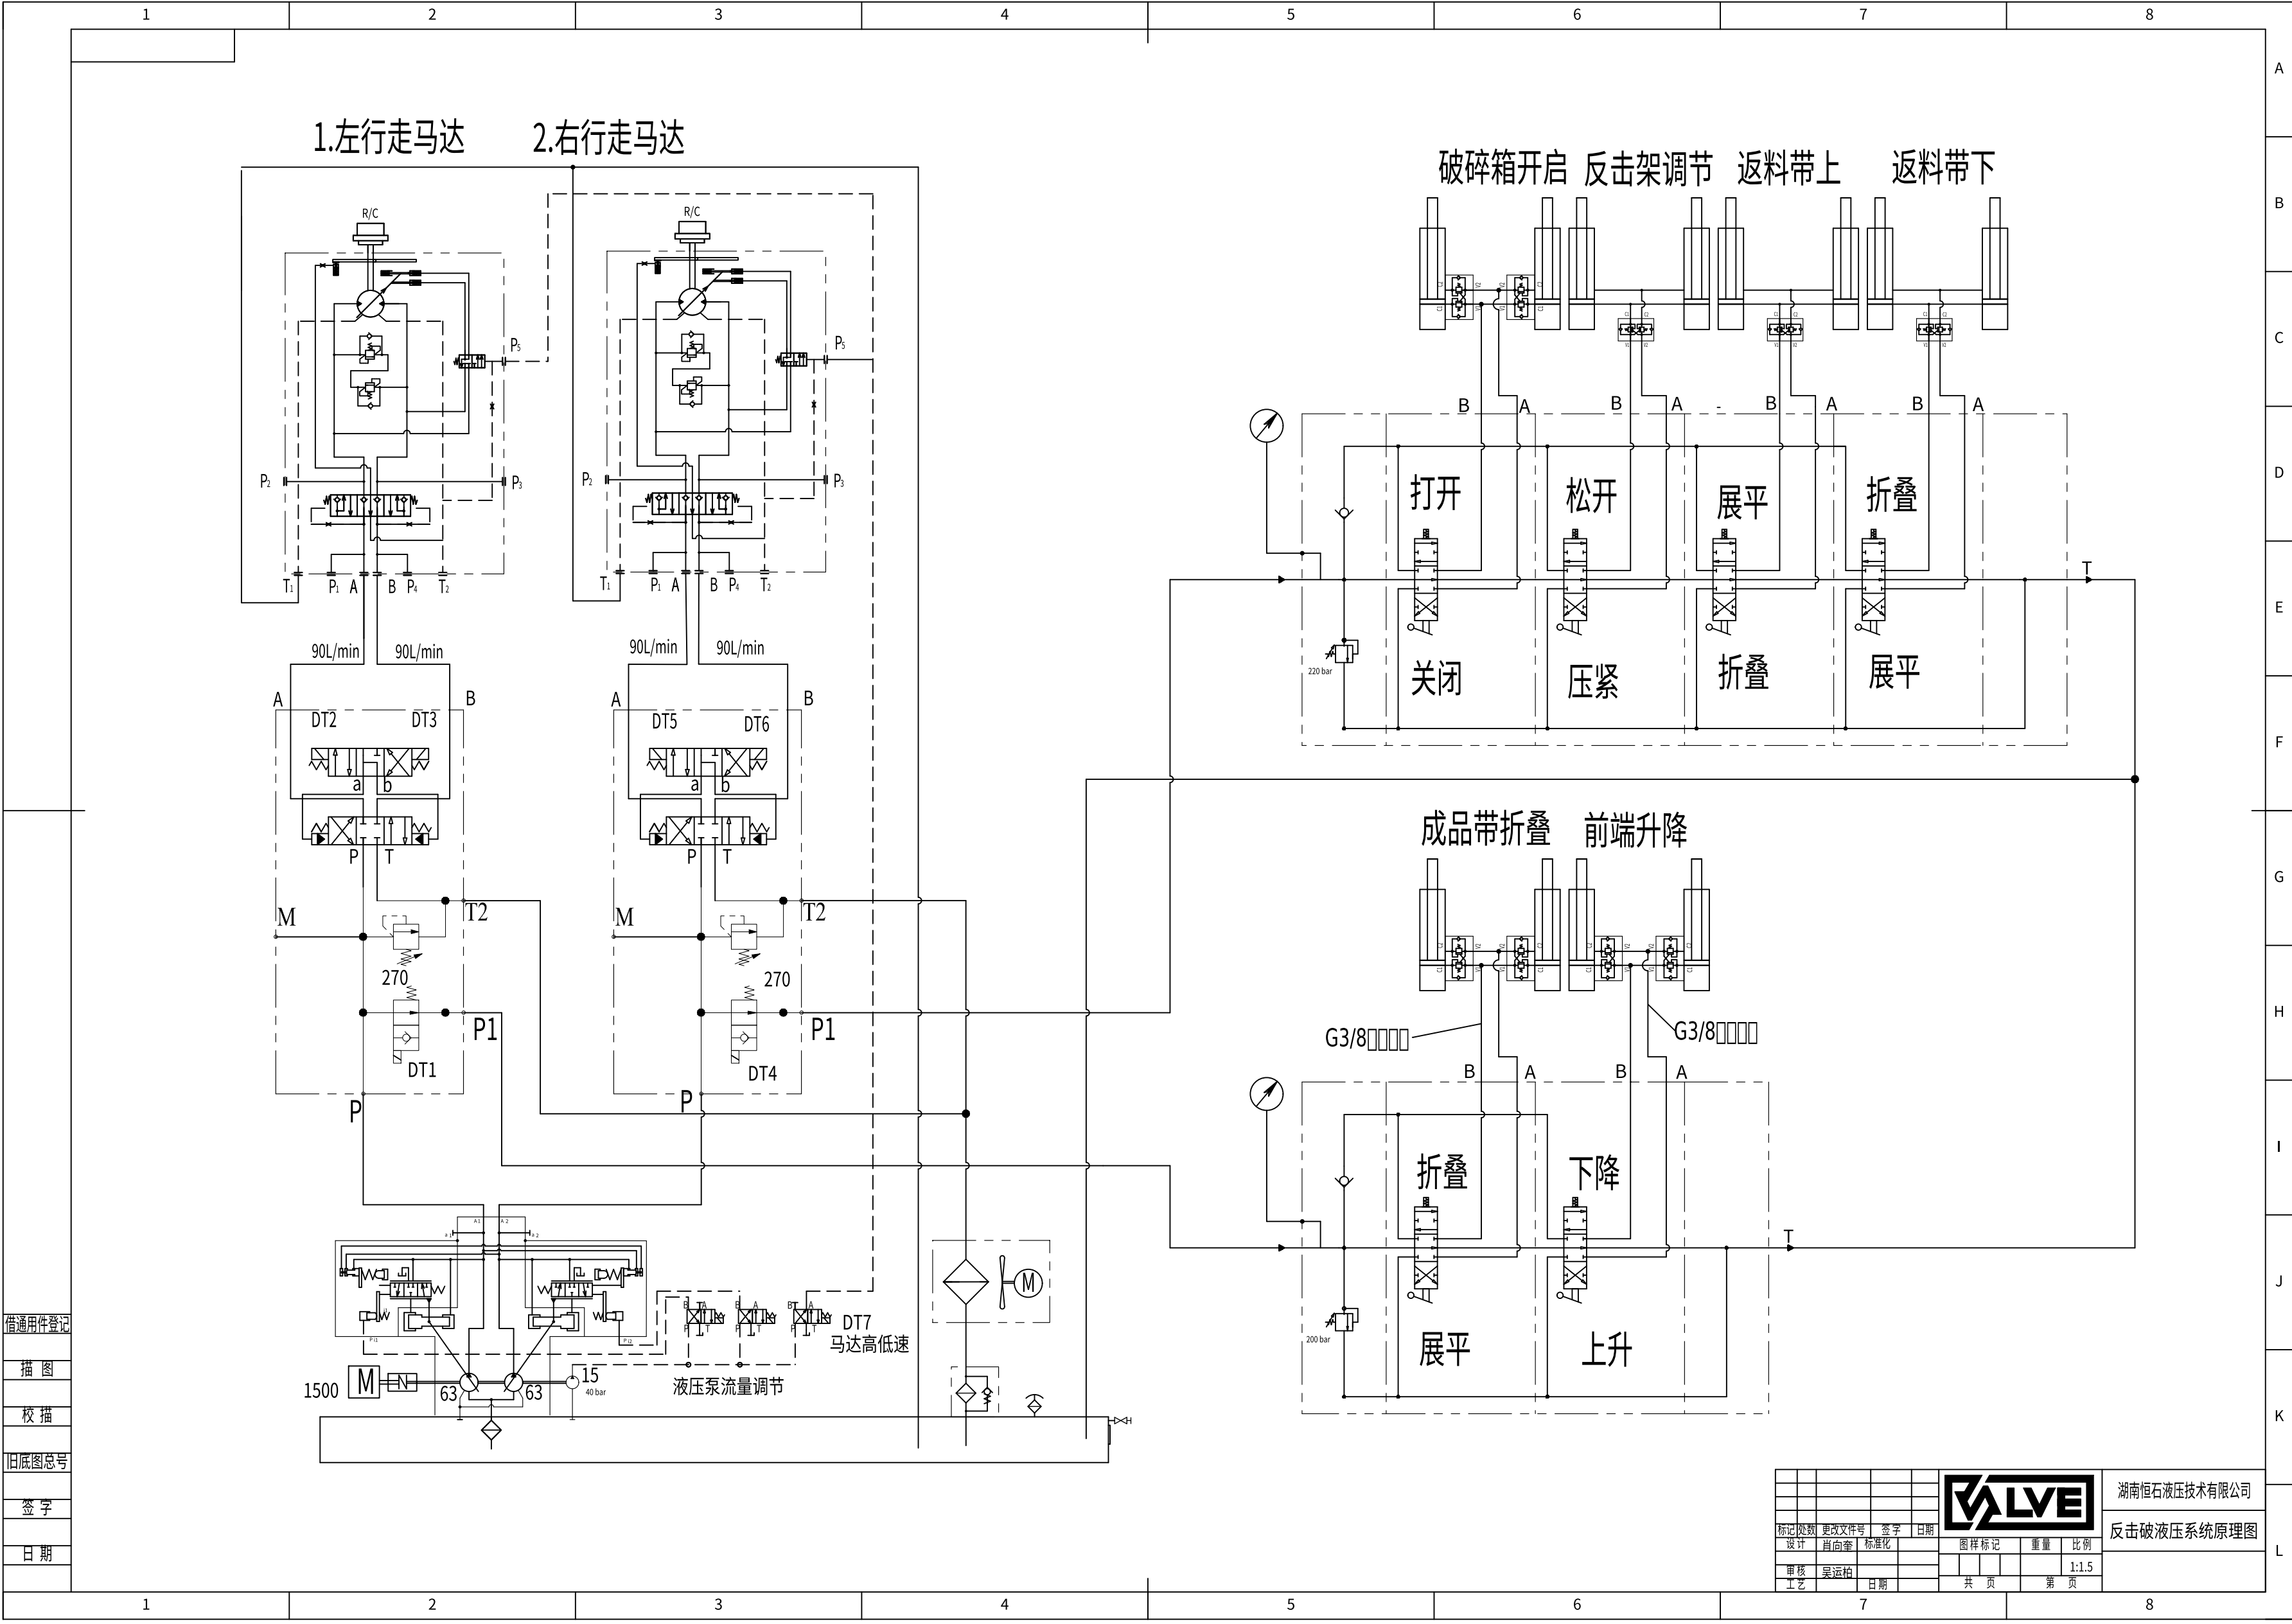

	DT1	DT2	DT3	DT4	DT5	DT6	DT7
左进	+	+					
左进	+		+				
右进				+	+		
右进				+		+	
高低速							+

26		压力表	2				
25		前端油缸	2				
24		成品带折叠油缸	2				
23		返料带油缸下	2				
22		返料带上油缸	2				
21		反击架油缸	2				
20		破碎箱油缸	2				
19	VBCDA3802A	管式双平衡阀	3				
18	VBCF3802A	双孔板式平衡阀	6				
17	DCV20-2-0197	二联换向阀	1				
16	DV20-4-0185	四联换向阀	1				
15	EF4-50	空气过滤器	1				
14	RFA400X10FY	回油过滤器	1				
13	4H1470T	风冷式油冷却器	1				
12	PMCI6000(PMP)	马达减速机	2				
11	W3068 24V	二位三通常开电磁阀	2				
10	DH220-5	溢流阀	2				
9	4WE6J61B/CG24NZSL	先导阀	2				
8	4WEH6E30B/6CG24NBTZSL	电液换向阀	2				
7	DSX-DC22	二位四通切换阀	3				
6		齿轮泵	1				
5	K3V63VDT 9N01	行走主泵	2				
4		联轴器	1				
3	YC4A100Z-D25	玉柴柴油机	1				
2	TF-400X100FY	吸油过滤器	1				
1	50*80*50	油箱	1				
序号	代 号	名 称	数量	材 料	单件重量	总计重量	斯查格备注